
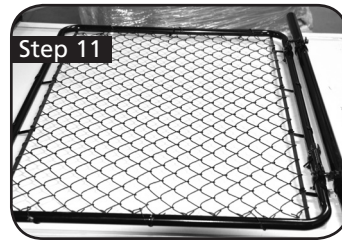
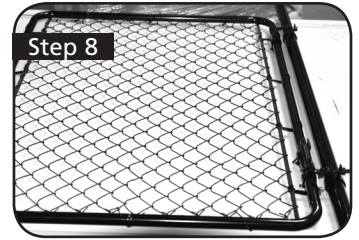
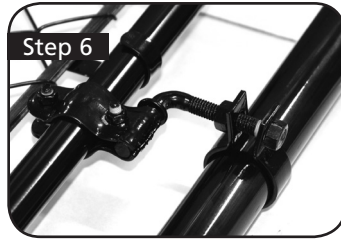
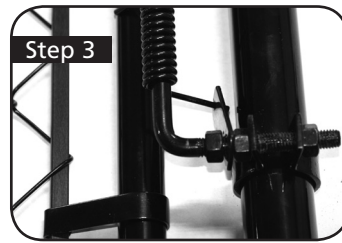


CHAIN LINK SELF CLOSING GATE INSTRUCTIONS

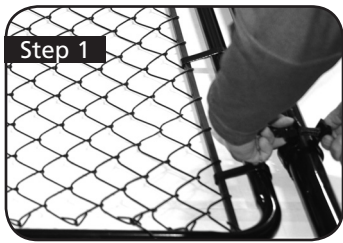

TO INSTALL YOUR GATE

Gate posts are to be set with 42" spacing between posts. Attach post collars to desired gate post by inserting the hinge bolts as shown. Point the bottom hinge bolt upward and the top hinge bolt downward to prevent the gate from being lifted off. Attach gate collars on gate as shown. Adjust finger up or down to achieve proper latching.

SELF CLOSING SPRING INSTALLATION INSTRUCTIONS

Decide where the spring closure will be installed for your application using the following guidelines: (A or B)

-when the gate opens towards you;

A) if the hinges are on the right side, the spring apparatus will be installed on the bottom right with the hinge bolt pointing up.

B) if the hinges are on the left side, the spring apparatus will be installed on the top left inverted (hinge bolt pointing down).

Loosely install (2 times) the 2 piece gate frame collars on the gate frame with the nuts and bolts provided at a 90 degree angle to the frame of the gate.

Place one of the 2 piece 1-7/8" round post collar at the desired height on the post.

Insert one hinge pin through the holes securing with the nuts provided. Note-lower hinge pin should point up and upper hinge pin should point down so gate can not be lifted off hinge pins.


Rest the end of the spring (that is not in the flat bar adjuster) against the 1-1/4" gate frame and insert the threaded hinge through the 1-7/8" post collar, tighten nuts until just secure.

Install the 1-7/8" finger catch on the post and the 1-1/4" finger on the gate frame at the desired height.

Pull or push the flat bar on the spring apparatus to apply desired tension on the spring. Secure the nuts on either side of the tension adjust bar when desired tension is acquired. (note-proper tension is acquired when the 1-7/8" catch accepts the 1-1/4" finger without slamming.)

NOTE: For pool fence installations, please check your local pool bylaws regarding proper fence requirements in your area.

BASIC TOOL REQUIREMENTS: wrench • hacksaw • rubber mallet • string • level

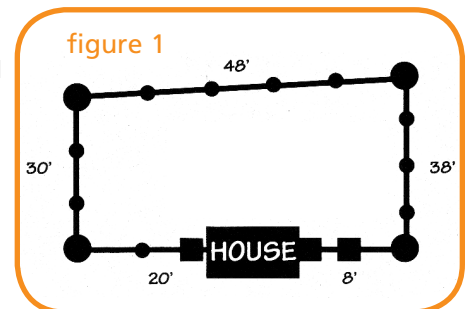

www.newtrendfencing.com

NEW TREND CORPORATION

37 Lancaster St. W., Kitchener, ON N2H 4T1 • T. 1.888.503.3623 F. 519.745.1309

