




NEW TREND CORPORATION

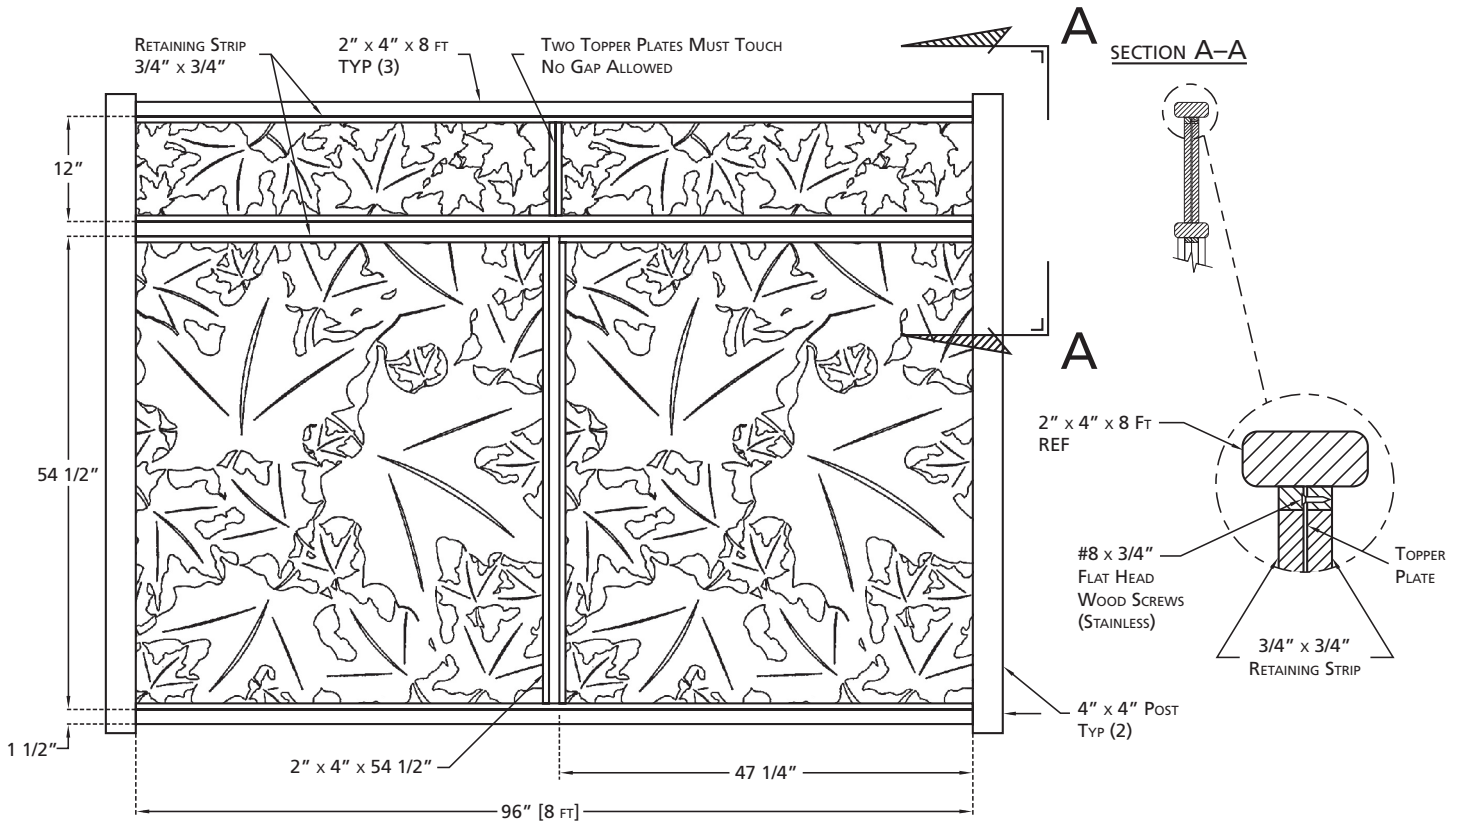

- 1) BUILD WOODEN FRAME AS PER DIMENSIONS PROVIDED ABOVE
- 2) APPLY x RETAINING STRIP AROUND THE MIDDLE OF ALL FRAME OPENINGS, USING 1 LONG GALVANIZED NAILS
- 3) INSERT (2) TOPPERS INTO PLACE, MAKING SURE THEY TOUCH IN THE MIDDLE
- 4) USING A SCREW DRIVER, OR A POWER DRILL, APPLY #8-3/4 LONG WOOD SCREWS (STAINLESS) TO ALL HOLES, SECURING TOPPER PLATES TO WOODEN FRAME. (52) SCREWS ARE REQUIRED TO INSTALL ONE 8 FT SECTION, CONSISTING OF (2) BOTTOM SECTIONS AND (2) TOPPERS.
- 5) APPLY x 3/4 WOODEN TRIM, USING GALVANIZED NAILS, COVERING SCREWS
- 6) REPEAT STEPS #3 TO #5 FOR BOTTOM PLATES.

NOTE - It is important to apply screws to all the holes to prevent entire section from sagging over time.

DISCLAIMER

Do not place fingers and / or hands through fence. It may result in personal injury. New Trend Corporation is not responsible for injuries caused by improper installation

WARRANTY

A ten year warranty against surface rust is granted providing:

- Powder-coated finish is not chipped, scratched, or damaged in any other way
- Panels are not installed near a road, exposed to salt and/or stone damage
- Panels are properly installed as per instructions provided